

# The Peaky Lighters

INSTALLATION INSTRUCTIONS

# LED HOUSE SIGN INSTRUCTIONS

# TO BE INSTALLED BY A QUALIFIED

**ELECTRICIAN** 

- 1. Unpack the Components:
  - Carefully remove all packaging materials.
- 2. Disassemble the Sign:
  - $\circ~$  Remove the acrylic front cover and the acrylic light diffuser.

### 3. Prepare the Wall:

- Use the rear base to align, level, and mark the positions for the drill holes.
- 4. Drill Holes:
  - $\circ~$  Drill the marked holes using a 5.5mm SDS drill bit.
  - Insert red Rawl plugs into the drilled holes.

# LED HOUSE SIGN INSTRUCTIONS

### 5. Feed the Cable:

- $\circ$   $\,$  Feed the cable through the grommet on the rear of the light base.
- Ensure that rubber grommets are attached to the screws and that spacers are inserted on the rear of the base before mounting.

#### 6. Mount the Rear Base:

 $\circ$  Secure the rear base to the pre-drilled holes in the wall using the screws.

#### 7. Connect Electrical Wiring:

- $\circ$   $\,$  Connect the mains cable to the connectors on the rear base:
- Live (Brown/Red)
- Neutral (Blue/Black)

# LED HOUSE SIGN INSTRUCTIONS

#### 8. Reassemble the Sign:

- Refit the light diffuser and the front cover, ensuring to remove the protective film from both sides of each piece.
- If provided, fit the 1.5mm black sheet directly after the rear diffuser to prevent light from passing through the front cover.
- 9. Secure the Front Cover:
  - Use the provided cap head bolts and rubber washers to secure the front of the sign.

#### Maintenance for Wooden LED Signs

#### Pre-oiled/Sealed Signs:

• If the sign was pre-oiled or sealed before delivery, re-oil or reseal the wood every 6 months to maintain its quality and integrity.

Non-oiled Signs:

• If the sign was not oiled before delivery, it is recommended to oil or seal it before installation.

# ACRYLIC SIGN INSTRUCTIONS

### **1. Unpack Components:**

• Carefully remove all packaging materials.

#### 2. Prepare the Wall:

• Use the rear base to align, level, and mark the positions for the drill holes.

## 3. Drill Holes:

- $_{\odot}~$  Drill the marked holes using a 5.5-6mm SDS drill bit.
- $\circ~$  Insert red Rawl plugs into the drilled holes.

#### 4. Remove Protective Film:

• Peel off the protective film from both sides of the rear base and the front acrylic sign.

# ACRYLIC SIGN INSTRUCTIONS

### • 5. Attach Standoffs:

 $\circ~$  Attach the provided standoffs to the rear base.

# • 6. Mount the Sign:

• Using the provided screws and front caps, secure the front and rear base to the wall.

#### • 7. Secure the Caps:

 $\circ$  Close the lids on the screw caps to finish the installation.

# WOODEN SIGN INSTRUCTIONS

- 1. Unpack Components:
  - Carefully remove all packaging materials.
- 2. Mark the Wall:
- Use the wooden sign to align, level, and mark the positions for the drill holes on the wall.
- 3. Drill Holes:
  - Drill the marked holes using a 5mm SDS drill bit.
  - Insert yellow Rawl plugs into the drilled holes.
- 4. Attach Standoffs:
  - $\circ\;$  Attach the provided standoffs to the rear base of the sign.

# WOODEN SIGN INSTRUCTIONS

### • 5. Mount the Sign:

- $\circ$  Using the provided screws and front caps, secure the sign to the wall.
- 6. Secure the Caps:
  - $\circ~$  Close the lids on the screw caps to complete the installation.

#### Maintenance

### **Pre-oiled/Sealed Signs:**

 If the sign was pre-oiled or sealed before delivery, it is recommended to re-oil or reseal the wood every 6 months to maintain its quality and integrity.

## Non-oiled Signs:

• If the sign was not oiled before delivery, it is recommended to oil or seal it before installation.